

CW - M106

Countertop

Water Dispenser Operation Manual




Contents	Page
Preface / Parts	1
Piping Installation	2
Hot Water Installation	3
Soda Water Installation	4
Water Button Instructions	5
UV Lamp Replacement	6
Front Cover Disassembly	7,8
Replacement of CO ₂ Cylinder	9
Replacement of Filter	10
Safety Reminder	11
Cleaning & Maintenance	12
Problem Shoot	13

Please read these instructions completely before operating this unit


PREFACE / PARTS

Before using this machine, we advise you to read this manual thoroughly.
Please follow the instructions for proper operation to prevent risk or damage.

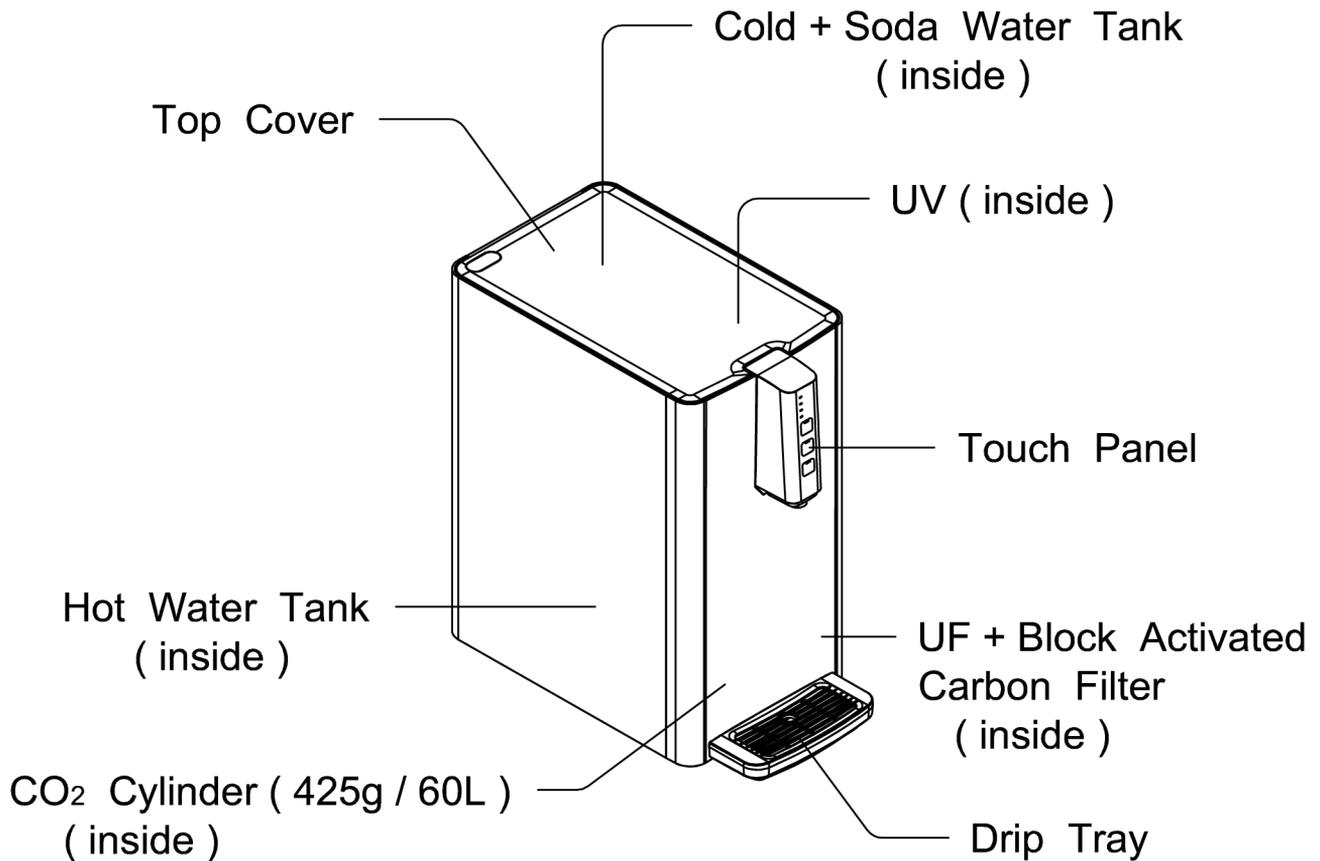

PIPING INSTALLATION



Please also prepare a pre-filtration equipment and install all parts as shown by below drawing.

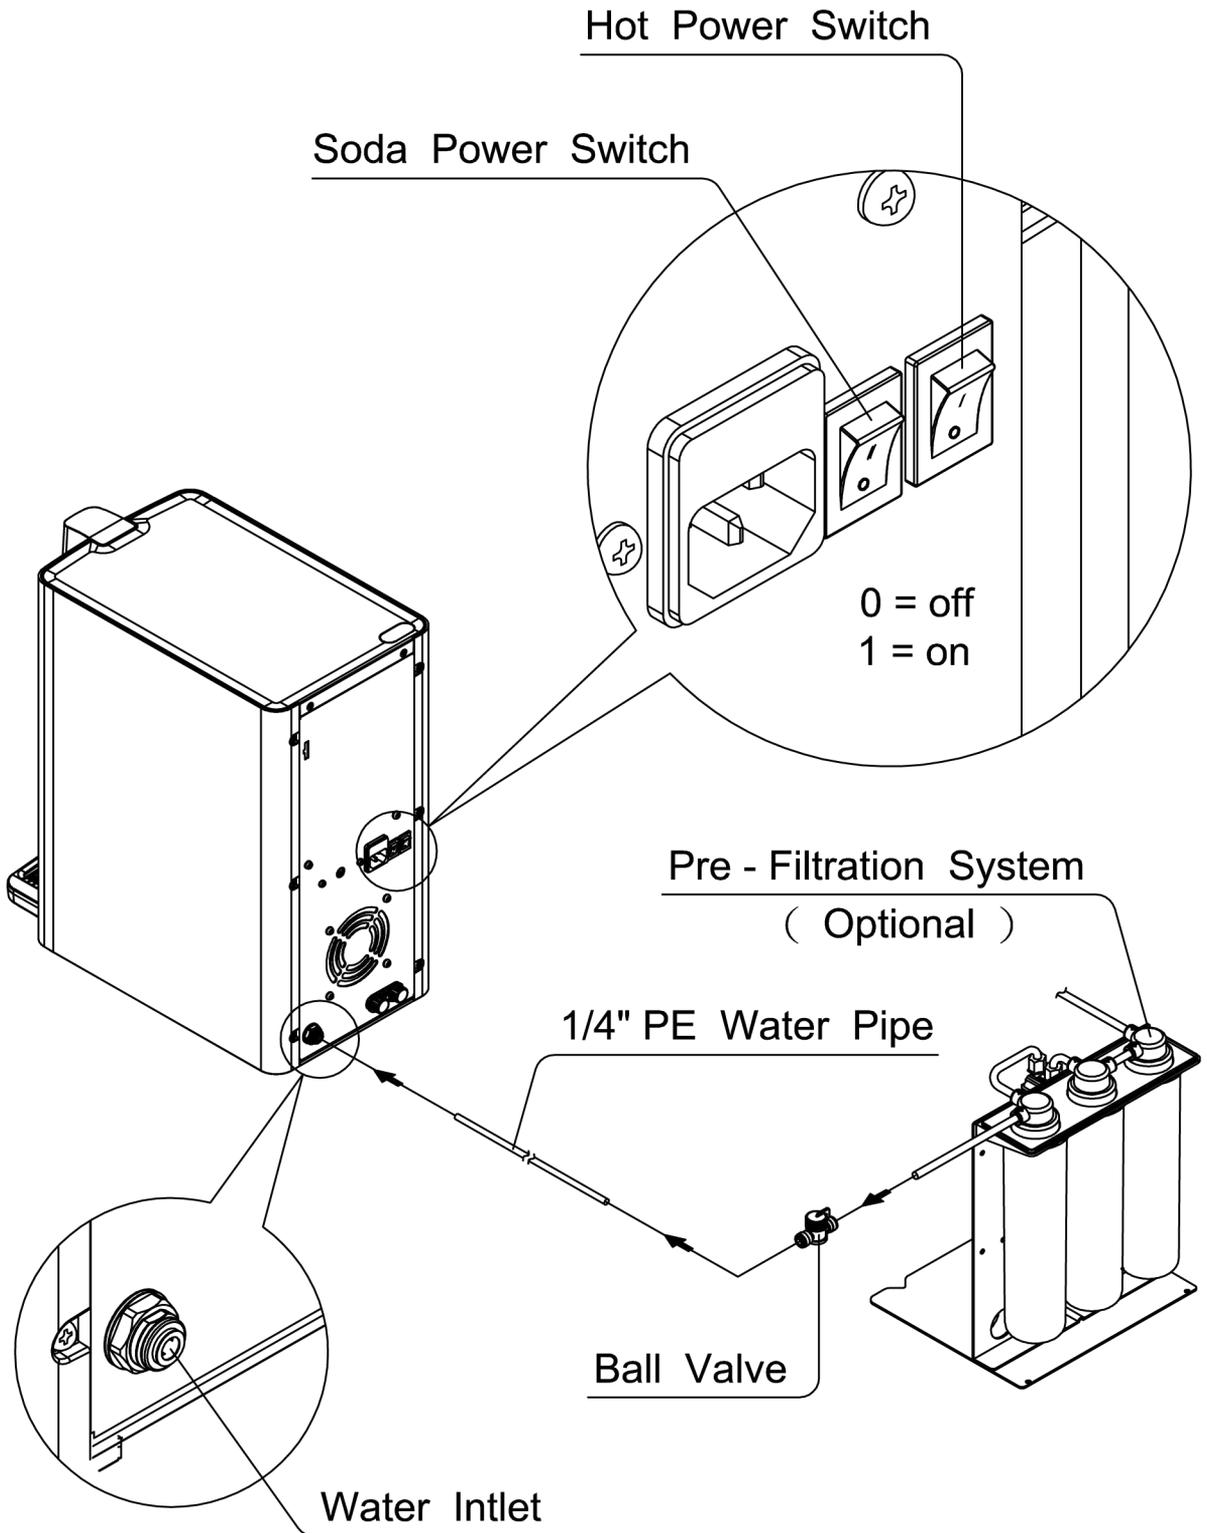

HOT OPERATION METHOD

1. Ensure the power switches at rear panel are OFF, then plug in the power cord and connect inlet water.
2. Press ambient or cold water (if there is no ambient water option) button to dispense some water to flush filters. This is important to ensure drinking water quality.
3. Press and hold hot water button until seeing water comes out.
Note: This is very important to prevent hot tank dry-heat.
Based on safety reasons, each time pressing unlock button, hot water button must be pressed for 3 seconds to dispense hot water. After the first dispense, hot water may be dispensed right away during the same unlocking period.
4. Turn on hot power switch at back, the machine will start heating immediately. The reheating will be started automatically when hot water temperature is too low.

For secure reason, the dispensing is limited within 60 seconds. If you need more water please touch button again.

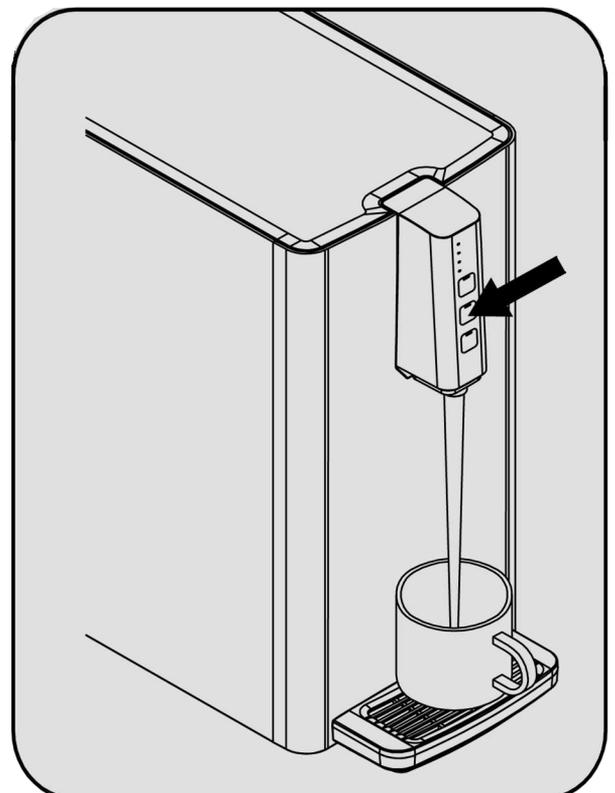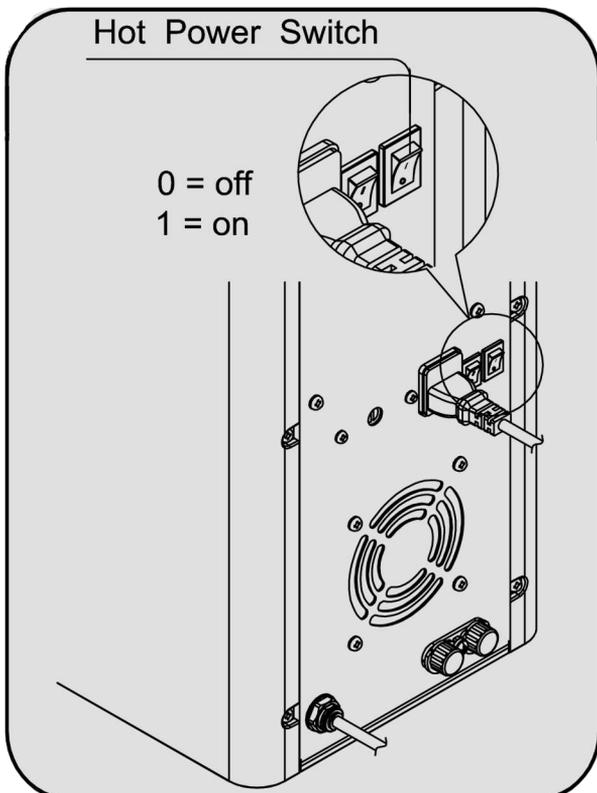

SODA OPERATION METHOD

1. Press ambient or cold water (if there is no ambient water option) button to dispense some water to flush filters. This is important to ensure drinking water quality.
2. Turn on the soda power switch at back, then press any button to allow mains water filling into soda tank.
3. Please push the soda water button to drain out the primary soda water in the tank. The newly produced soda water is now ready to drink.

For secure reason, the dispensing is limited within 60 seconds. If you need more water please touch button again.



Cold Water





Hot Water



Sparkling Water




Ambient Water

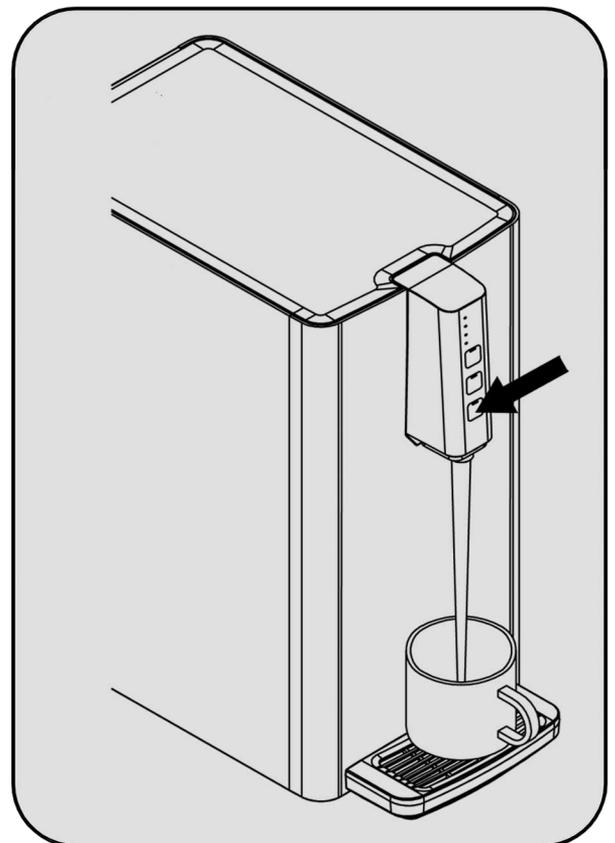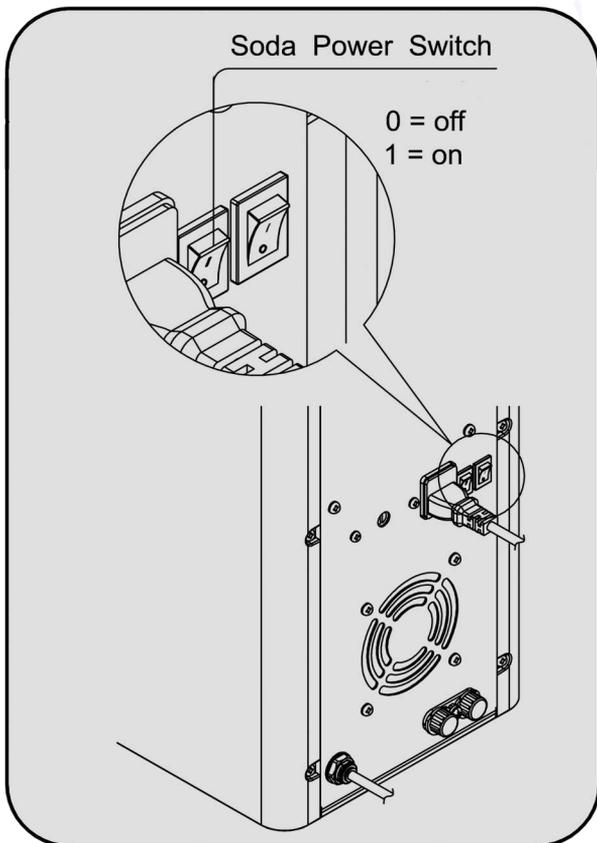

WATER BUTTON INSTRUCTION

1. After chilling and heating processes are completed, the water in the dispenser is ready for serving.
2. For secure reason, each dispense is limited to 60 seconds. If more water is needed, please press the water buttons again.


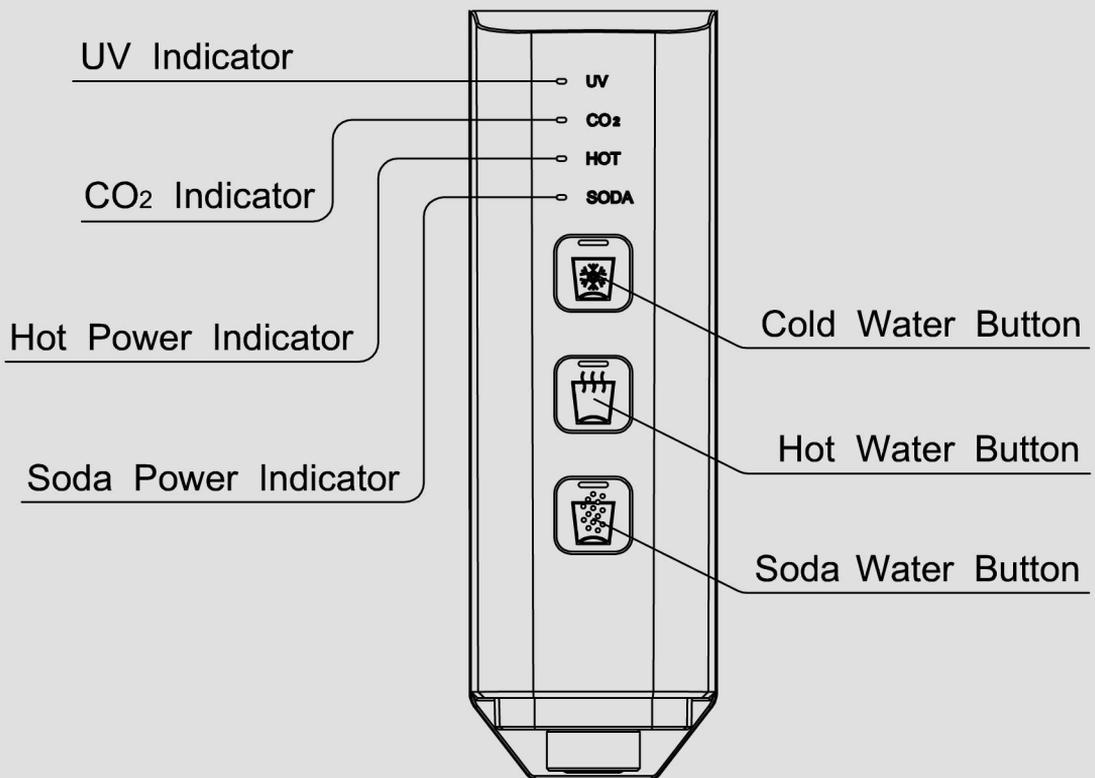


UV LAMP REPLACEMENT

Please replace UV lamp immediately when hearing 2 beeps while dispensing water and the UV indicator on the touch panel is flashing.

Replacement procedures :

1. Unplug the power cord and take off the top cover by removing screws on the rear upper side.
2. Disconnect the UV wire from the unit and remove the UV lamp from its housing.
3. Replace a new UV lamp back to the housing and connect the wire to the dispenser again.



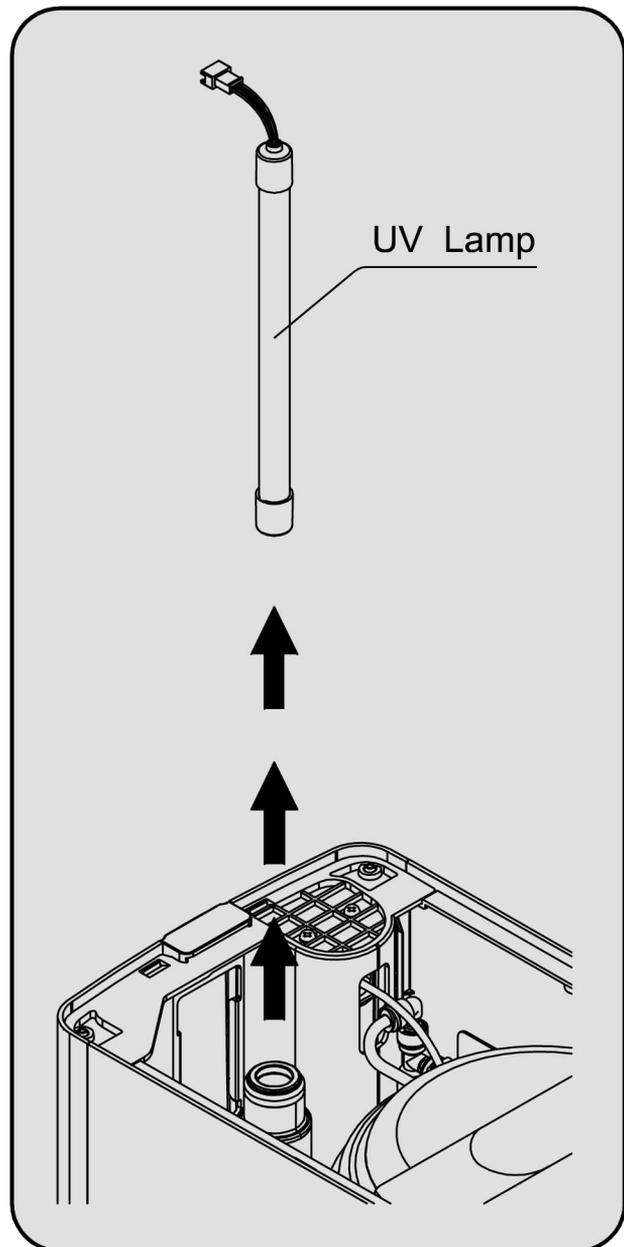
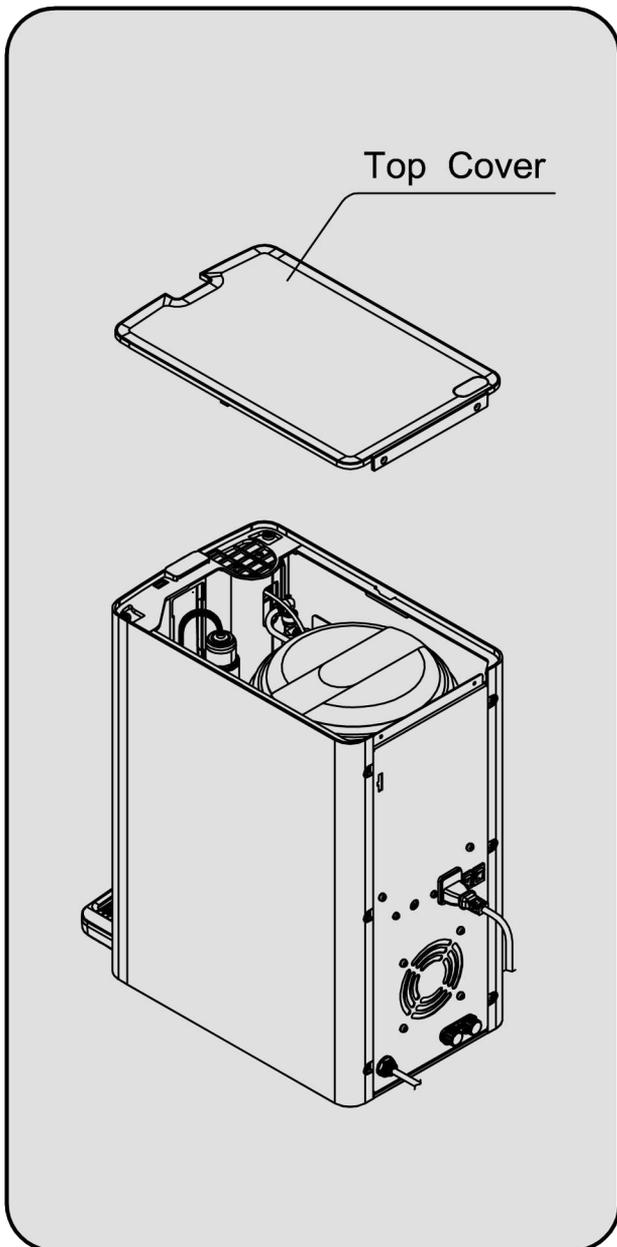


FRONT COVER DISASSEMBLE

1. Please remove the drip tray by pulling it outward slightly as shown in drawing 1.



2. Pull out the unit to leave about 3 to 5cm of the front side in air to make room for detaching the front cover.

3. Lift the front cover outward and pull it down as shown by the arrows in drawing 3 to remove the front cover.

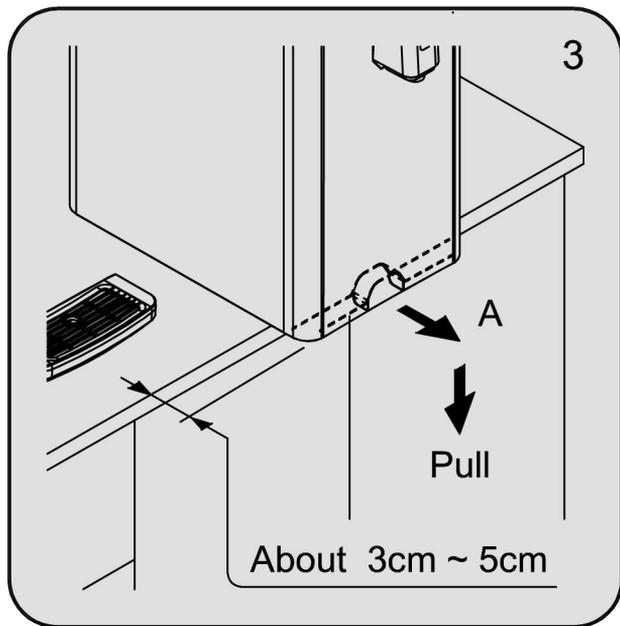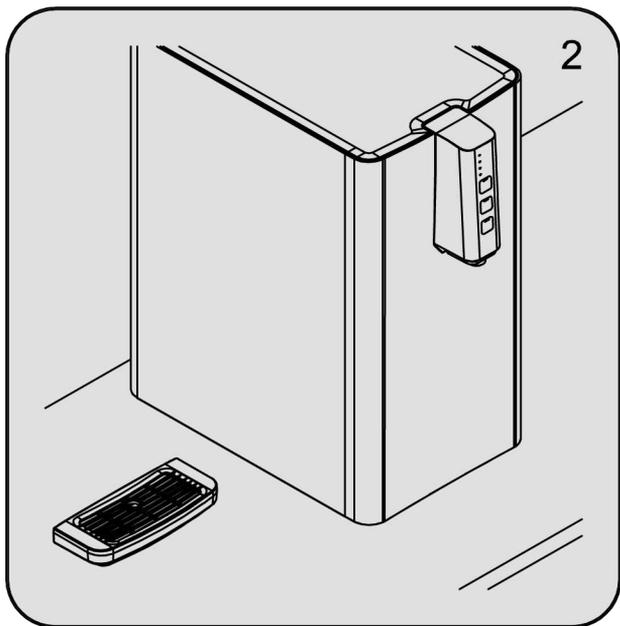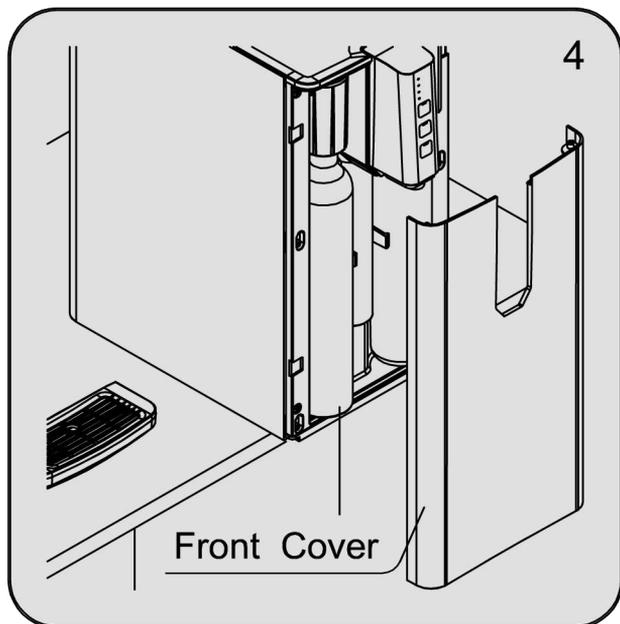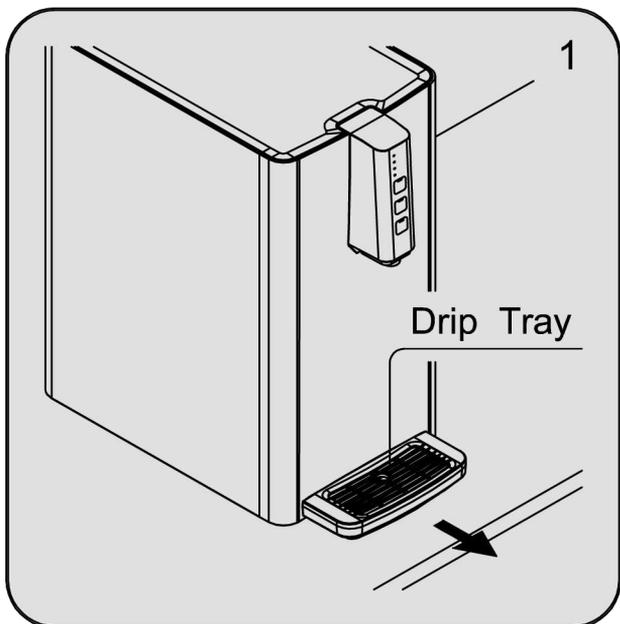

FRONT COVER DISASSEMBLE

Hold the front cover to aim for the positioning holes on the top and push it up slightly. Then press the cover in to mount it on the unit firmly.

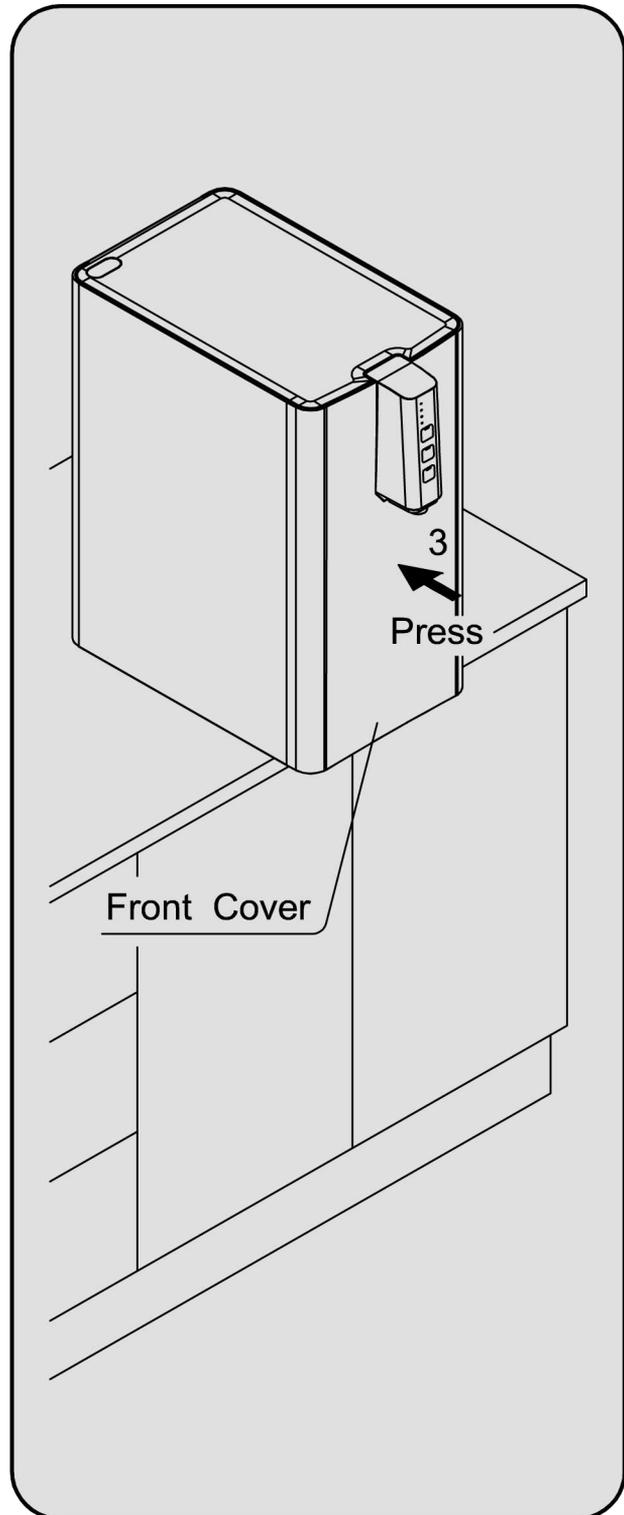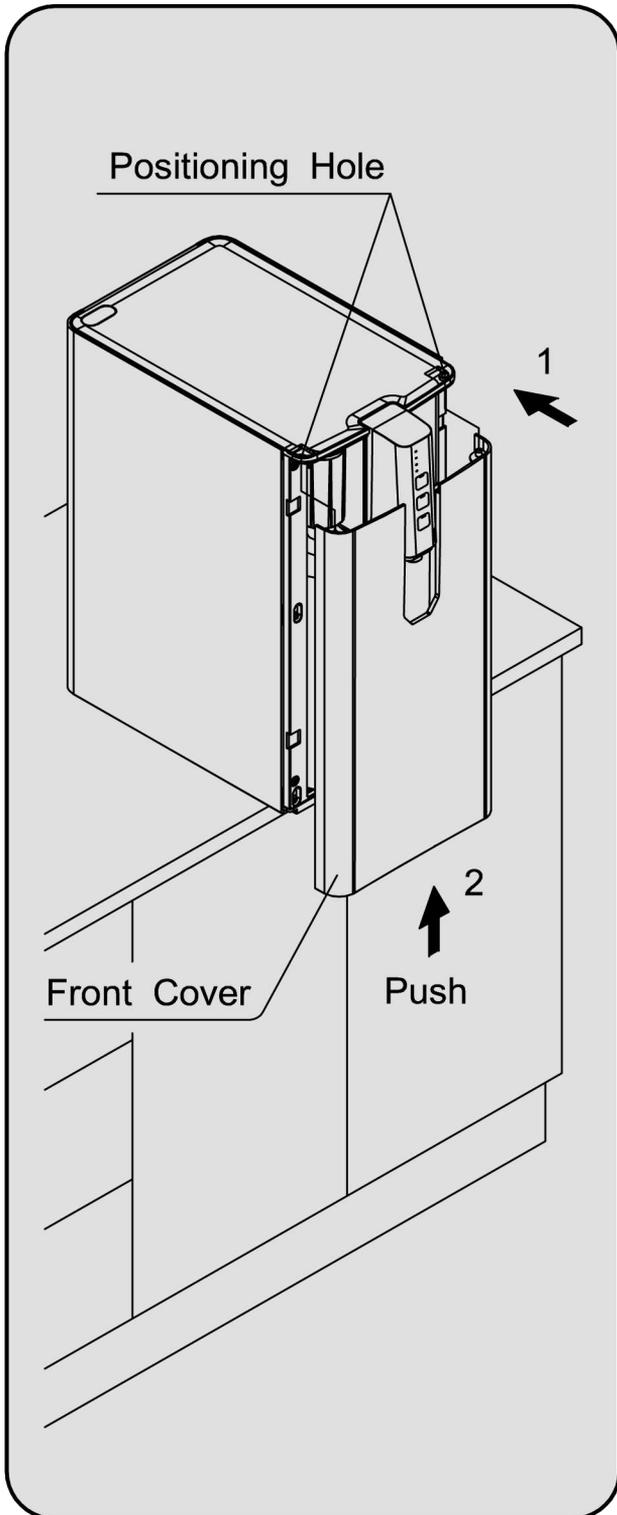


CO₂ CYLINDER REPLACEMENT

When CO₂ is going low, the CO₂ indicator on the touch panel will be off. Please replace a new CO₂ cylinder (CO₂ cylinder : 425g, 60L)

Replacement procedures :

1. Please remove the front cover by instructions shown on page 7.
2. Lift up the CO₂ cylinder as directed by arrow B shown in the drawing below, then twist it in clockwise direction to disconnect.
3. Attach the new CO₂ cylinder to the connector and twist in counterclockwise direction to connect. Please be sure to tighten it properly.
4. Push the CO₂ cylinder back to the slot then place the front cover back by following the instructions on page 8.

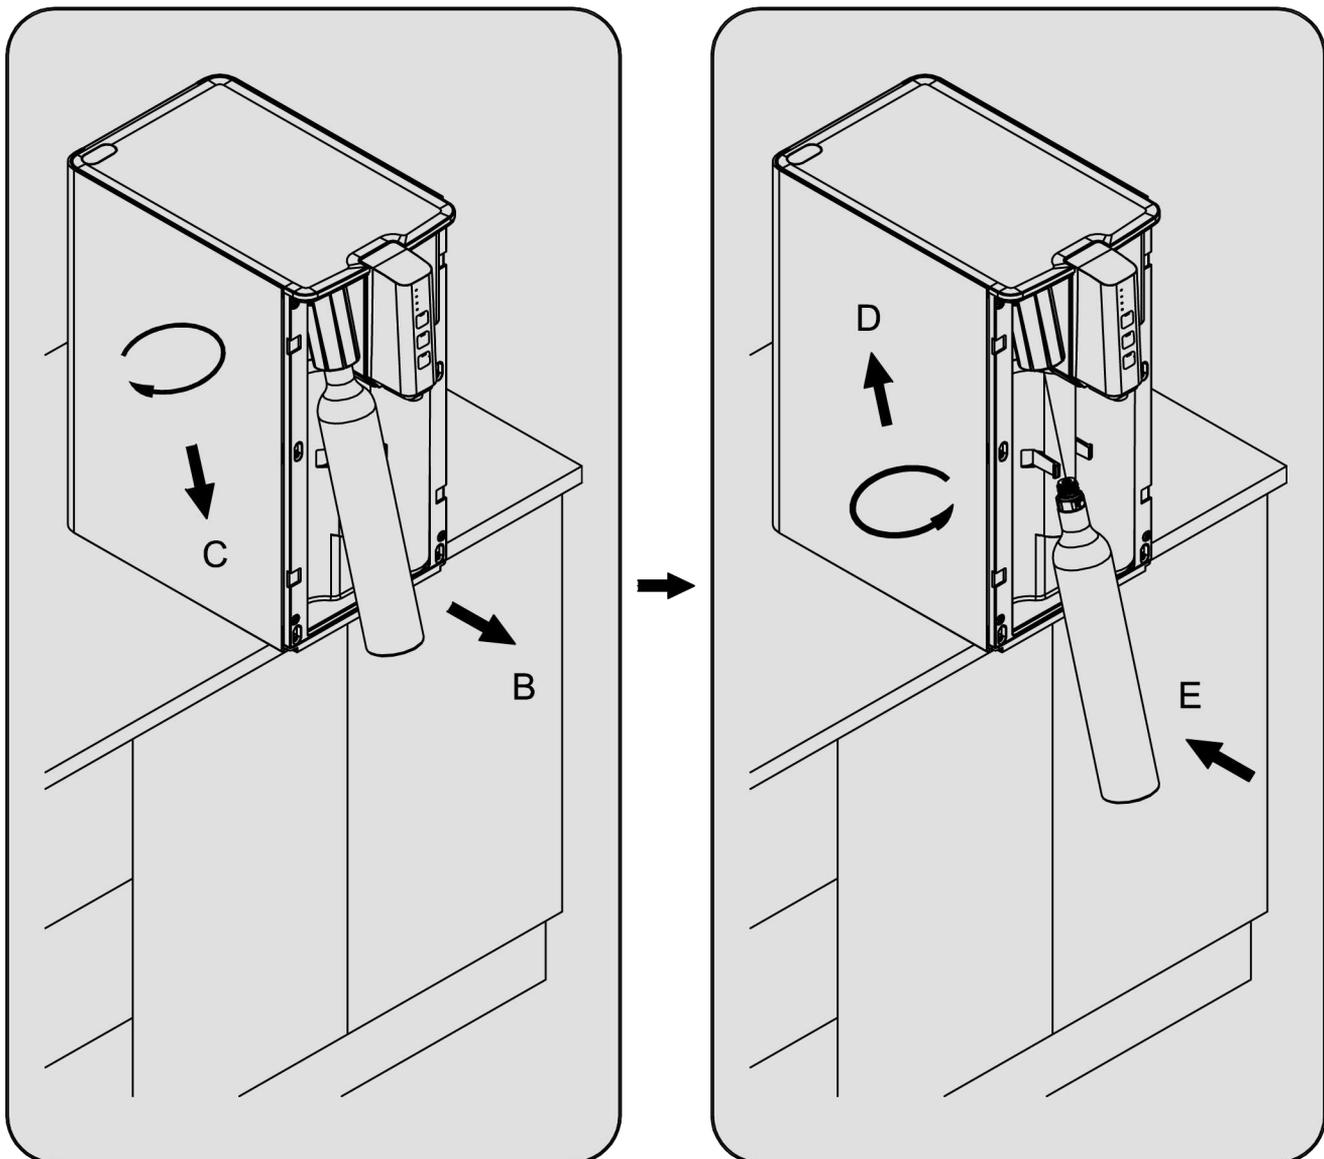


FILTER REPLACEMENT


To ensure the drinking water quality, please replace the filter regularly base on the local water quality.

Replacement procedures :


- 1.Lift up the filter as directed by arrow B, then twist it in clockwise direction to remove.
- 2.Attach the new filter and connect it by twisting in counterclockwise direction to tighten. Then push the filter back into the slot to complete replacing.
- 3.Place the front cover back by following the instructions on page 8.

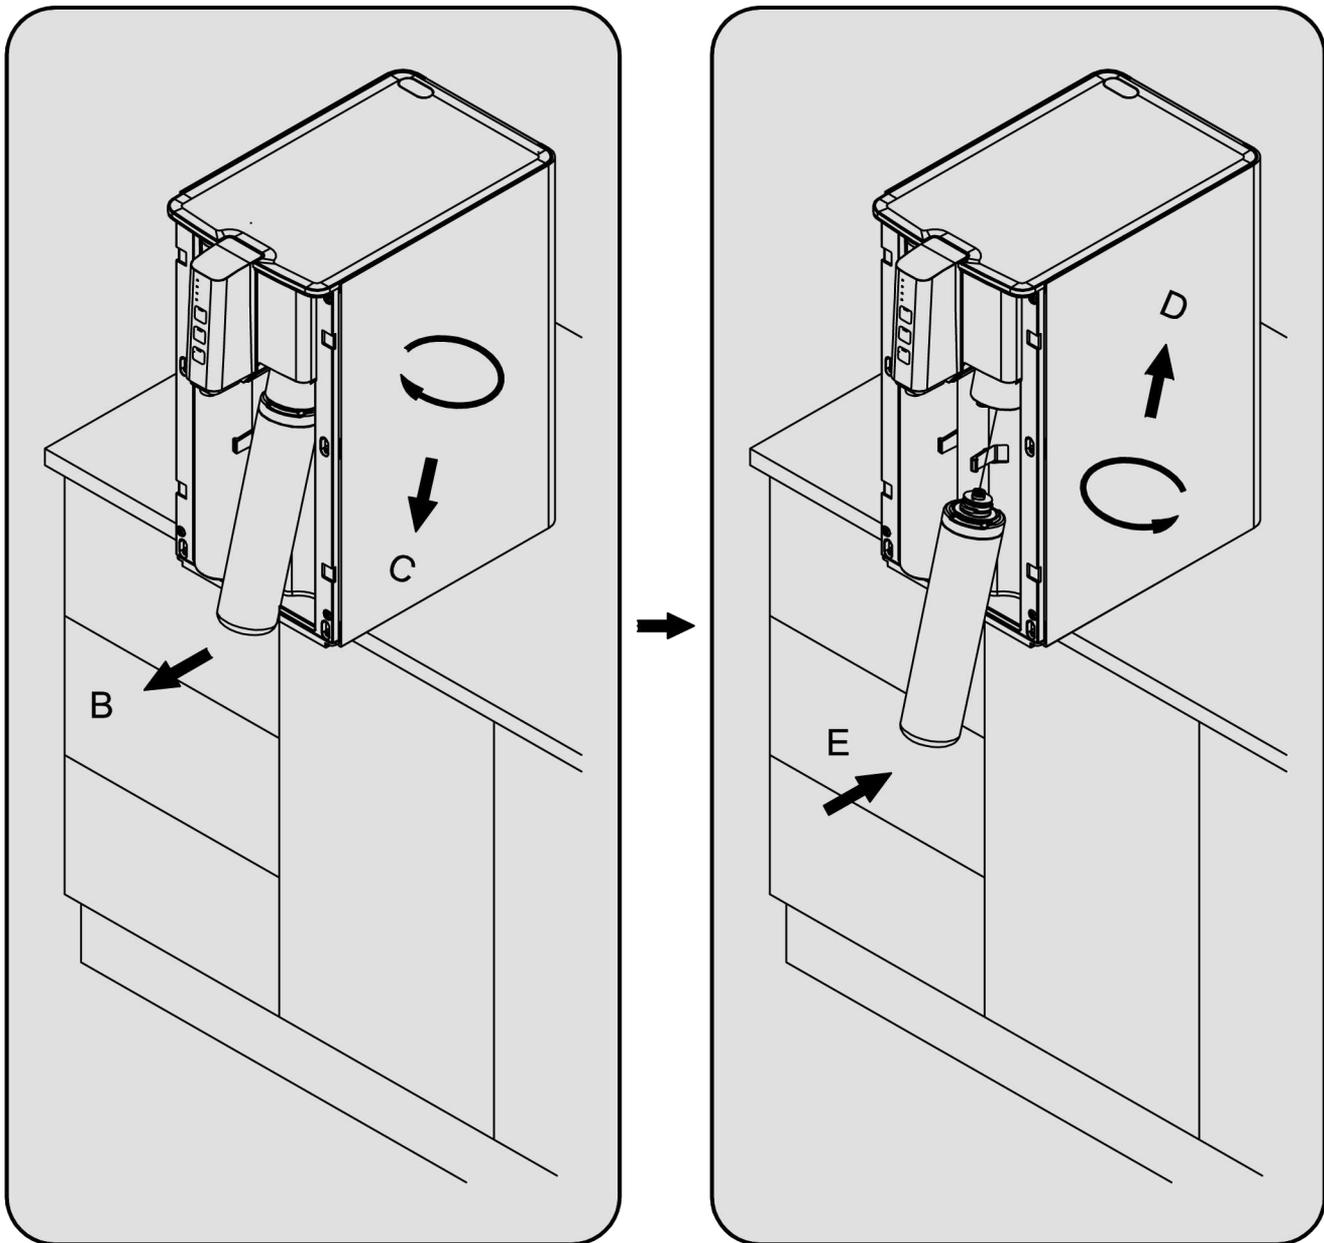


SAFETY REMINDER

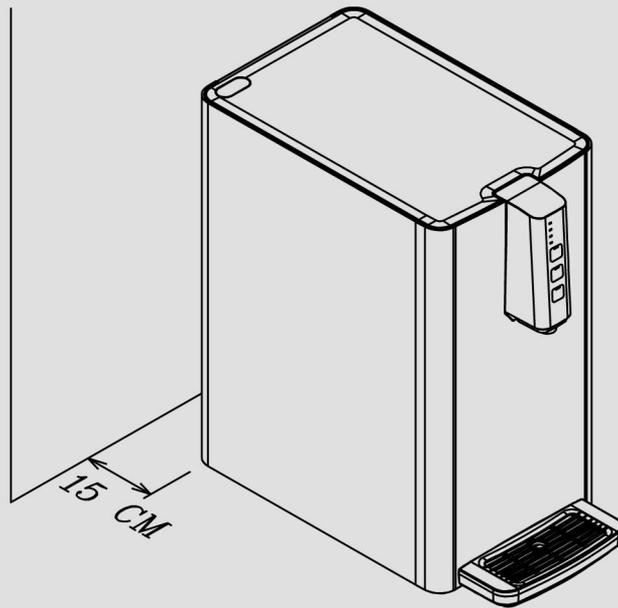

Please place in a well-ventilated environment.

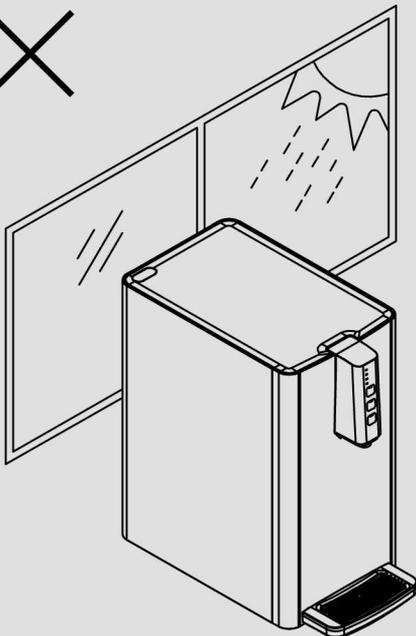


Keep the machine away from sunlight , heat , and moisture.

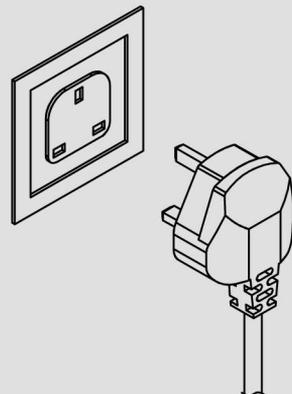


Be sure to use single outlet socket with correct power voltage. Plug the power cord directly into electrical socket.

CLEANING & MAINTENANCE

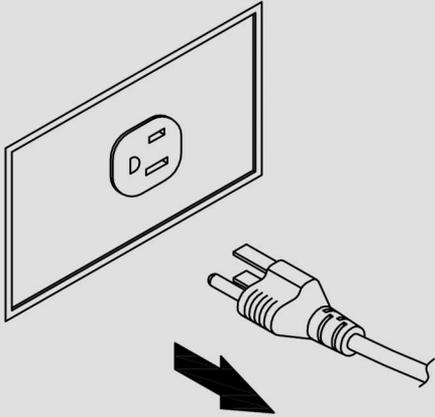


1. Please make sure the machine is completely disconnected from electricity before cleaning.

Hot Water Drain

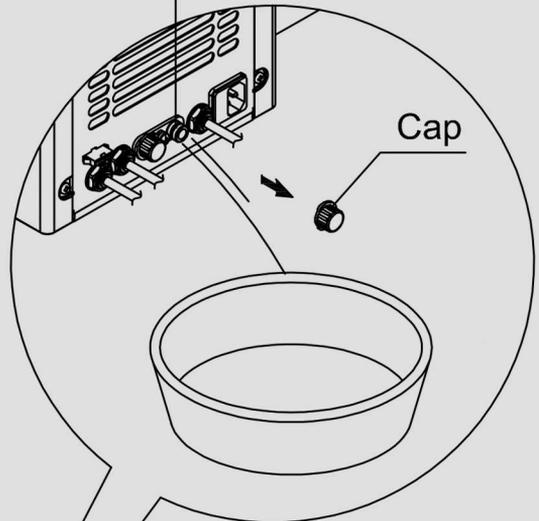

2. Remove the cap of hot water drain. The remaining water in the tank will drain out. Cleaning may start when both tank are emptied. Please put the cap back when cleaning is done.

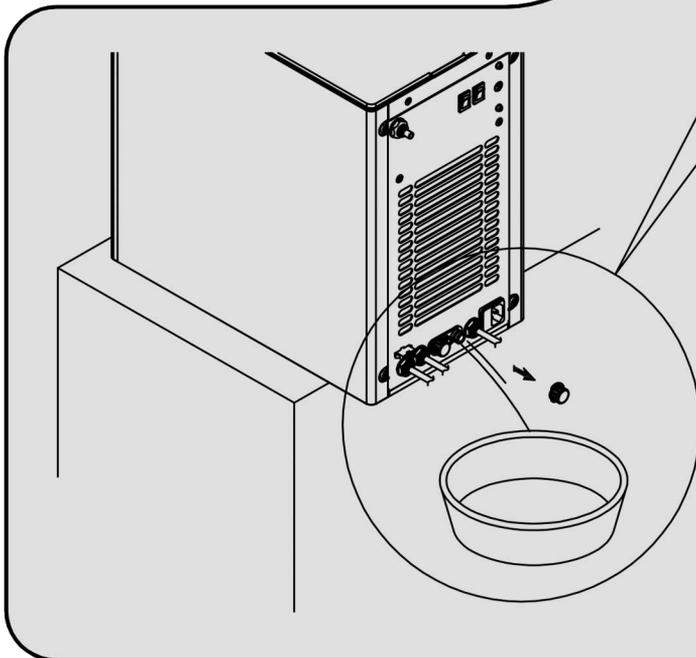

Caution : 1. Prevent water entering into the circuit board or other electric parts while cleaning. The dispenser maybe damaged if water go into interior electric parts.



2. For your safety , please contact your distributor or qualified technician for repair when the water dispenser is damaged.

PROBLEM SHOOT

Defection Status	Possible Defection Reason	Solution
Hot water is not hot	1. The hot power switch is off.	Turn the hot power switch on.
	2. Hot temperature protection is enabled due to dry-heat.	Call for service to reset the protection button on the hot tank.
	3. Problem with PCB or thermostat.	Please contact service people.
No hot water	1. No water from mains water supply.	Check inlet water supply.
	2. Inlet water pressure is too low.	Check inlet water pressure from pre-filtration system or water supply.
	3. Water is not being filling into hot tank.	Please press hot water button to fill water into hot tank until water comes out.
Cold water is no cold	1. The cold power switch at back is off	Turn the cold power switch on.
	2. Chilling time is not enough.	Please wait 40 minutes for water chilling.
	3. Refrigerant leaks.	Contact service people.
No cold water	1. No water from mains water supply.	Check inlet water supply.
	2. Cold water is being filling into cold tank.	Contact the service people.
	3. Inlet water pressure is too low.	Check inlet water pressure from pre-filtration system or water supply.
	4. Water in cold water tank got frozen.	Unplug the power cord then wait for 4 – 8 hours. Internal pipe may be broken please contact service people as well.
No sparkling water	1. CO ₂ runs out.	Replace a new CO ₂ Cylinder.
	2. The soda power switch at back is off.	Turn the soda power switch on.
	3. Water is unable to be filled to sparkling water tank.	Contact the service people.

PROBLEM SHOOT

Defection Status	Possible Defection Reason	Solution
Hot water is dripping from dispensing nozzle.	1. Inlet water pressure is too low.	Check inlet water pressure from pre-filtration system or water supply.
	2. The solenoid valve got malfunction.	Contact service people.
Sparkling water is dripping from dispensing nozzle.	1. The remaining sparkling water in pipe is flowing due to CO ₂	Wait for a few seconds, it will be stopped.
	2. The solenoid valve got malfunction.	Contact service people.
UV indicator light is blinking and hearing beeps when dispensing water.	1. UV lamp is failure or no UV lamp is connected	Replace a UV lamp or check if the UV wire is disconnected.
	2. UV board is failure.	Contact service people.
All dispensing buttons are blinking and hearing beeps when press button.	1. There is leakage detected inside of water dispenser.	Unplug the power cord, then dry water on the internal base or ask for service.
	2. The waste water container is full.	Please drain all water from waste water container.
Bubble of sparkling water is insufficient.	1. The CO ₂ and water doesn't mixed properly.	Please wait more time.
	2. CO ₂ almost runs out.	Replace CO ₂ cylinder
	3. CO ₂ output pressure is too low.	Please adjust output pressure to 4 bar as suggestion.